



**spotLIFTER**

USER'S GUIDE

1719 SERIES 220-240V

3 Safety Instructions

4 Product View

5 Product Features

6-8 Operations

8-9 Maintenance and Care

9-10 Troubleshooting

11 Consumer Services

11 Replacement Parts

12 Warranty



 
## Thanks for buying a BISSELL Spot Lifter™ 2X Cordless Handheld Deep Cleaner

We're glad you purchased a BISSELL Spot Lifter 2X cordless handheld deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Spot Lifter 2X is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Spot Lifter 2X.

Thanks again, from all of us at BISSELL.



**Mark J. Bissell**

**President and Chief Executive Officer**

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL SPOT LIFTER 2X CORDLESS HAND-HELD DEEP CLEANER.**

## **WARNING - To reduce the risk of fire, electric shock, or injury:**

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use Spot Lifter 2X if it has been dropped, damaged, left outdoors or dropped into water, have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not use with any opening blocked.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not allow to be used as a toy.
- Not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use for any purpose other than described in this User's Guide.

- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only cleaning products formulated or recommended by BISSELL for this appliance.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your Spot Lifter 2X.
- Use charger unit only in standard electrical outlet (220-240V~50/60 Hz.).
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Spot Lifter 2X contains rechargeable nickel metal hydride (NiMH) batteries. Do not incinerate batteries or they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin:

- Flush immediately with warm water for at least 15 minutes, then wash with soap and water.

If battery cell contents comes in contact with the skin:



- Flush immediately with clean water for a minimum of 15 minutes
- Seek medical attention.

## **SAVE THESE INSTRUCTIONS FOR FUTURE USE.**

**IMPORTANT** FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

**THIS MODEL IS FOR HOUSEHOLD USE ONLY.**

## Product view

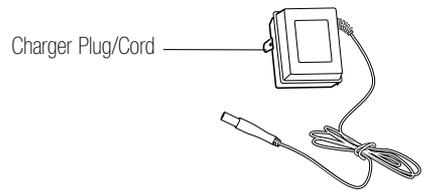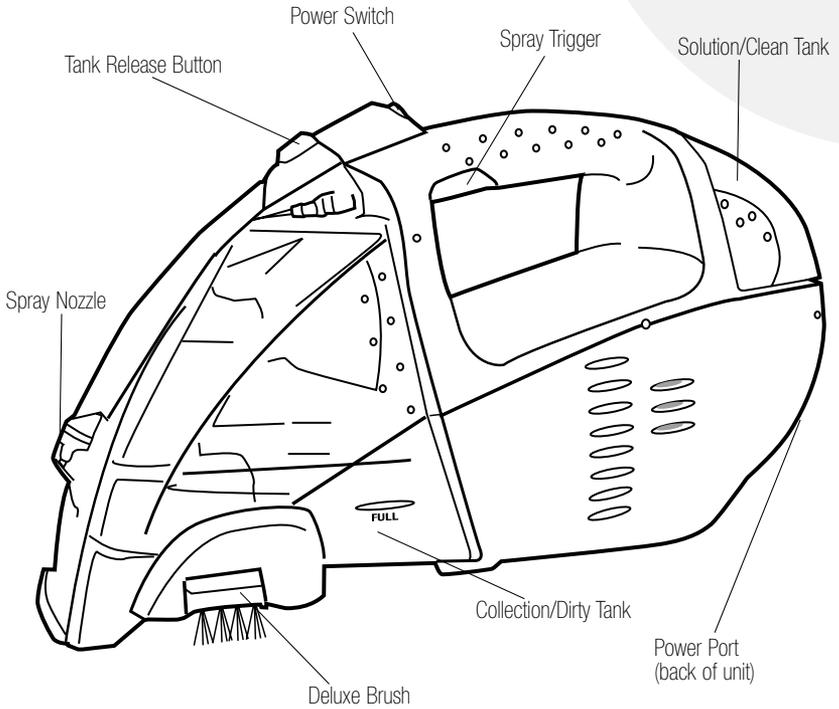

**CAUTION:** Only use one of BISSELL's advanced formulas for portable deep cleaning machines in your cleaner. Use of cleaning formulas that contain lemon or pine oil may damage this appliance and void warranty. Do not use chemical spot cleaners or solvent-based soil removers. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

## How to use this guide

This user's guide has been designed to help you get the utmost satisfaction from your Spot Lifter 2X cordless hand-held deep cleaner. You'll find assembly directions, instructions for all cleaning tasks, safety precautions, plus maintenance and troubleshooting instructions. Please read this user's guide thoroughly before using your Spot Lifter 2X. Pay particular attention to the parts diagram and part names. Familiarize yourself with the controls and how they're used. Following the user's guide will greatly enhance your ability to get the best performance from your Spot Lifter 2X for many years.

## Product features

### **Solution/clean tank**

Holds BISSELL advanced cleaning formulas for portable deep cleaning machines and water. (See "Filling the solution/clean tank," page 6)

### **Collection/dirty tank**

Empty after each use, or when dirty water reaches the indicated maximum fill line. (See "Machine care," page 8)

### **Tank release button**

Press to remove the collection/dirty tank.

### **Power port**

Connect charger cord here to charge Spot Lifter 2X.

### **Spray trigger**

Press to spray cleaning solution and water.

### **Deluxe brush**

For scrubbing stubborn spots and soil. Removable for use on or off the unit.

### **Charger plug**

Plugs into electrical outlet. Spot Lifter 2X is not designed to operate while plugged into the charger.

# Operations

## Charging the battery

1. When charging for the first time, allow to charge uninterrupted for at least 12 hours.  
**NOTE: When charging, the Spot Lifter 2X and charger may become warm to the touch. This is normal and no cause for concern.**
2. Spot Lifter 2X must be in “**O**” (OFF) position to charge.
3. When completely charged, your Spot Lifter 2X will operate for up to 15 minutes. When completely discharged, it will take approximately 12 hours to fully recharge.
4. To charge your Spot Lifter 2X, connect the round end of the charger cord into the power port on the back of the unit.

**NOTE: Decreased operating time may indicate that the battery has built up a charging resistance. To recharge, first completely exhaust the battery, recharge it, then exhaust it once again before recharging a second time. This procedure may be required more than once.**

## Filling the solution/clean tank




1. Remove solution/clean tank by grasping it firmly and pulling straight up.
2. Unscrew and remove the cap. Add water and formula\* to the indicated fill lines on the solution/clean tank  
**\*Note: Your Spot Lifter 2X includes two trial size bottles of formula.**
3. Replace cap and place solution/clean tank back on unit.

## *Tip:*

For maximum battery life, completely discharge and recharge Spot Lifter 2X every 1-2 months.

## *Tip:*

After unit is charged (approximately 12 hours) unplug from outlet. This will aid in prolonging the life of the battery.

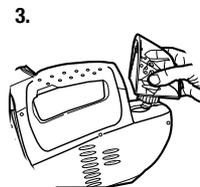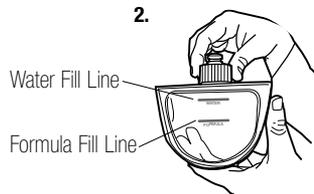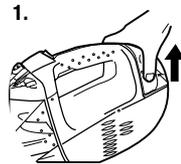

## Operations (continued)

### Pre-treating

1. Turn power switch "I" (ON).
2. To pre-treat stained or highly soiled areas, hold Spot Lifter 2X above soiled surface and press spray trigger to spray cleaning solution.
3. Let cleaning solution set for 3-5 minutes before cleaning.

2.



### Spot cleaning carpet

1. Turn power switch "I" (ON).
2. Hold Spot Lifter 2X above soiled surface and press trigger to spray cleaning solution, as in pre-treating step 2 above.
3. Press front of Spot Lifter 2X firmly against surface and pull toward you to remove cleaning solution and soil.
4. Repeat steps 2 and 3 until no more dirt or cleaning solution can be removed. Do not overwet.
5. For stubborn spots and soil, use brush to gently scrub soiled area while continuing to spray cleaning solution. To remove brush from unit, gently pull on brush tab and lift out.

**NOTE: If Spot Lifter 2X stops spraying, turn power switch "O" (OFF) and check cleaning solution level. Refill if needed. Never run dry.**

### Spot cleaning upholstery

1. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your Spot Lifter 2X. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed.
2. If manufacturer's tag is missing or not coded, check with your furniture dealer.

**NOTE: If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.**

*Tip:*

Immediate attention to a spill on upholstery can prevent permanent staining.

3.




5.



*Tip:*

Use the brush after applying cleaning solution and remove any surface soil. Using the brush before applying solution can push soil more deeply into carpet.

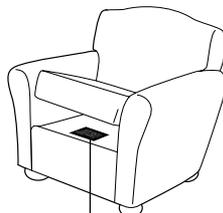


Manufacturer's Tag

## Operations (continued)

### Cleaning spills from hard surfaces

1. Turn power switch “**I**” (ON).
2. Press front of Spot Lifter 2X firmly against hard surface to suction up spill.
3. Press spray trigger to spray cleaning solution.
4. Press front of Spot Lifter 2X firmly against hard surface to suction cleaning solution, as in step 2 above.

**NOTE: If the Spot Lifter 2X stops spraying, turn power switch “**O**” (OFF) and check cleaning solution level. Refill if needed. Never run dry.**

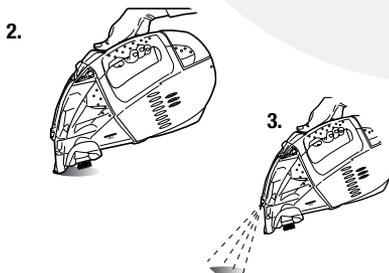

## Maintenance and care


### Machine care

1. Turn power switch “**O**” (OFF).
2. Carry the Spot Lifter 2X to the sink or drain.

### To empty the collection tank

1. Remove the collection/dirty tank by pressing the tank release button at the top of the tank. The tank will pivot out on a “hinge” at the bottom of the unit.
2. Remove the tank plug by turning approximately 1/4 turn counterclockwise and lifting out. Empty tank.
3. Thoroughly rinse the collection/dirty tank with clean water. Be sure to rinse nozzle area.
4. Replace tank plug and turn approximately 1/4 turn clockwise, until snug.
5. To replace the tank, pivot bottom of tank back into “hinge” and tilt up to handle. Press the tank release button, and snap the tank into place. Test for a secure fit before using.

**NOTE: Check the solution/clean tank. If a significant amount of formula and water remains, you may leave it in the solution/clean tank for your next cleaning task.**

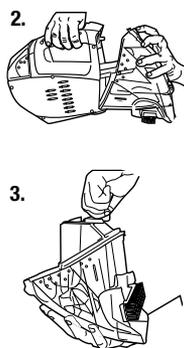

### *Tip:*

Check spray nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.

## Maintenance and care (continued)

### Machine storage

1. Clean exterior surface of Spot Lifter 2X with a soft cloth dampened with water only. Do not use a strong detergent or other cleaners as this may damage the finish.
2. Store Spot Lifter 2X in a protected dry area, at room temperature (40° - 110°F).

### Battery removal and disposal

**Note: The battery must be removed from the Spot Lifter 2X before it is disposed of.**

1. Important: Unplug charger.
2. Remove tanks (front and rear) and discard.
3. Remove screws (6) holding product housings together.
4. Use a screwdriver to score rating label on bottom of unit.
5. Separate housings and locate battery pack in bottom/center of unit.

**Note: If the battery is leaking, do not touch it. Contact your local authorities for a safe disposal or recycling facility in your area.**

6. Remove wire connectors from the battery pack.
7. Keep battery packs together – DO NOT separate individual batteries. For proper battery disposal instructions, please contact your local authorities for requirements and regulations on safe disposal or recycling facilities in your area.
8. Discard remainder of product.

## Troubleshooting

### Reduced Suction / No Suction

#### Possible Cause


1. Collection/dirty tank is full
2. Collection/dirty tank drain plug is loose
3. Batteries weak/undercharged
4. Collection/dirty tank not properly installed

#### Remedies

1. Empty collection/dirty tank
2. Check plug for snug fit
3. Recharge according to instructions
4. Snap tank into place

## **WARNING:**

This product contains a rechargeable nickel metal hydride battery (sometimes referred to as a “NiMH” battery) pack. The average life of a NiMH battery is 5 to 7 years, depending on frequency of use. Proper removal and disposal of NiMH batteries is required.

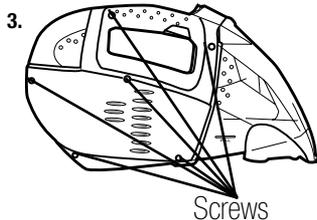

## **WARNING:**

To reduce the risk of electric shock, turn power switch OFF and disconnect charger from electrical outlet before performing maintenance or troubleshooting.

## Troubleshooting (continued)

### Reduced spray / no spray

#### Possible Cause

1. Solution/clean tank is empty
2. Pump not primed
3. Batteries weak/undercharged
4. Spray tip clogged

#### Remedies

1. Refill solution/clean tank
2. While Spot Lifter 2X is turned on, press spray trigger and gently rock Spot Lifter 2X back and forth
3. Recharge according to instructions
4. Rinse tip with clean water

### Spot Lifter 2X is not powered / underpowered

#### Possible Cause

1. Charger plug/cord not connected

#### Remedies

1. Make sure charger plug is completely plugged into wall outlet and charging cord is completely plugged into port on back of unit. Make sure Spot Lifter 2X is stored with power switch in "O" (OFF) position

### Spot Lifter 2X will not charge

#### Possible Cause

1. Charger plug/cord not connected
2. Batteries have charging resistance

#### Remedies

1. Make sure charger plug is completely plugged into wall outlet and charging cord is completely plugged into port on back of unit. Make sure Spot Lifter 2X is stored with power switch in "O" (OFF) position
2. To recharge, first completely exhaust the battery, recharge it, then exhaust it once again before recharging a second time. This procedure may be required more than once.

**Other maintenance or service not included above should be performed by an authorized service representative.**

**Thank you for selecting a BISSELL product.**

**Please do not return this product to the store**

## BISSELL Consumer Service

### If your BISSELL product should require service:

In the UK, Australia, or New Zealand, call BISSELL Consumer Services at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. For all other countries, contact your local in country distributor for questions, service, or repair.

If you have questions about your warranty or need replacement parts please contact the numbers below.

#### For UK inquiries:

Monday - Thursday 9 am — 5 pm  
Friday 9 am — 4 pm

#### BISSELL Homecare (Overseas) Inc.

The Boat Yard  
105 Straight Road  
Old Windsor  
Berkshire, SL4 2SE  
United Kingdom  
Telephone: 0844-888-6644

#### For New Zealand inquiries:

Monday - Friday 9 am — 5 pm

#### Parex Appliances

5 Tolich Place  
Henderson 0610  
Auckland  
New Zealand  
Telephone: 0800-247-735

Or visit the BISSELL website - [www.bissell.com](http://www.bissell.com)

When contacting BISSELL, have model number of unit available.

Please record your Model Number: \_\_\_\_\_

Please record your Purchase Date: \_\_\_\_\_

**Note: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim. See Warranty on page 12 for details.**

Please do not return this product to the store.

#### For Australian inquiries:

Monday - Friday 9 am — 5 pm

#### BISSELL Australia PTY Ltd.

42 Rocco Drive  
Scoresby 3179  
Victoria  
Australia  
Telephone: 1-800-811-183

#### For all other inquiries:

Monday - Friday 8 am — 4 pm

#### BISSELL Homecare, Inc.

PO Box 1888  
Grand Rapids, MI 49501 USA  
Telephone: 01-616-453-4451  
Fax: 01-616-453-1383

## Replacement Parts - BISSELL Spot Lifter 2X

Item	Part No.	Part Name
1.	203-2571	1719 Collection/Dirty Tank including Plug
2.	203-2567	1719 Solution/Clean Tank including Cap & Insert
3.	203-2504	Collection/Dirty Tank Plug
4.	203-2575	Solution/Clean Tank Cap & Insert
5.	203-2577	Charger Plug/Cord - 3 pin UK plug
6.	203-2578	Charger Plug/Cord - 3 pin Australian plug
7.	203-2579	Charger Plug/Cord - 2 pin European plug
8.	203-2574	Deluxe Brush
9.	79B9-E	473 mL 2X Concentrate Little Green™ Advanced Formula
10.	74R7-E	473 mL 2X Concentrate Pet Stain & Odor Advanced Formula

1



2



3



4



5/6/7



8



9



10



## Warranty - BISSELL Spot Lifter 2X

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by telephone, or regular post as described below, or contact your local in country distributor.

### Limited One Year Warranty

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc., will replace (with new or remanufactured components), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part do to manufacturers defect.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, or use not in accordance with the User's Guide is not covered.

#### For UK inquiries:

Monday - Thursday 9 am — 5 pm  
Friday 9 am — 4 pm

#### BISSELL Homecare (Overseas) Inc.

The Boat Yard  
105 Straight Road  
Old Windsor  
Berkshire, SL4 2SE  
United Kingdom  
Telephone: 0844-888-6644

#### For New Zealand inquiries:

Monday - Friday 9 am — 5 pm

#### Parex Appliances

5 Tolich Place  
Henderson 0610  
Auckland  
New Zealand  
Telephone: 0800-247-735

#### For Australian inquiries:

Monday - Friday 9 am — 5 pm

#### BISSELL Australia Pty Ltd

42 Rocco Drive  
Scoresby 3179  
Victoria  
Australia  
Telephone: 1-800-811-183

#### For all other inquiries:

Monday - Friday 8 am — 4 pm

#### BISSELL Homecare, Inc.

PO Box 1888  
Grand Rapids, MI 49501 USA  
Telephone: 01-616-453-4451  
Fax: 01-616-453-1383

**BISSELL HOMECARE INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.**

#### \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

**THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.**



©2010 BISSELL Homecare, Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 120-4169  
Rev 1/10  
Visit our website at:  
[www.bissell.com](http://www.bissell.com)

