

SPINFOAMER CARPET SHAMPOO APPLIANCE

How to use your
BISSELL Spinfoamer

Comment utiliser votre Distributeur
de shampooing BISSELL

Gebrauch Ihres BISSELL -
Shampooengeräts

Hoe uw BISSELL shampoo
apparaat te gebruiken

Cómo usar el aplicador de
champú para alfombras BISSELL

KEEP FOR FUTURE REFERENCE.

 
A CONSERVER POUR TOUTE
RÉFÉRENCE FUTURE

ZUR SPÄTEREN BEZUGNAHME
AUFBEWAHREN.

VOOR LATER GEBRUIK BEWAREN.

GUARDARLAS PARA REFERENCIA FUTURA.

- Be sure to read all the operating instructions before using the appliance.
- Lisez attentivement tout le mode d'emploi avant d'utiliser votre balai.
- Vor Gebrauch des Geräts immer die Bedienungsanleitung lesen.
- Gehele gebruiksaanwijzing lezen alvorens het apparaat te gebruiken.
- Asegurarse de leer todas las instrucciones de operación antes de utilizar el artefacto.

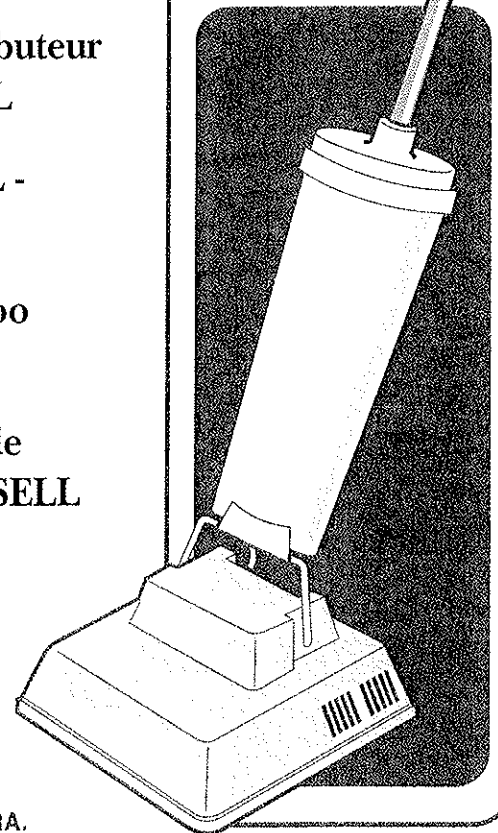

OPERATING INSTRUCTIONS

SAFETY INSTRUCTIONS

1. Read this leaflet completely before attempting to operate the unit. Always follow the safety instructions.
2. As a general guide to fitting any plug. Ensure the lengths of wire inside the plug are prepared correctly. Connections should be firmly made after all conductor strands are entered into the terminal posts.
3. Do not use the unit with damaged cord or plug. Do not use unit if working improperly, dropped, damaged or left outdoors.
4. Do not pull on the cord to unplug the machine. Grasp the plug instead. Keep the cord away from heat, oil or sharp edges. Do not close doors on the cord, or snag it under furniture or doors with sharp edges.
5. Do not touch the plug with wet hands. Turn all controls "Off" and disconnect unit from electric power before cleaning.
6. Switch to "Off" (O) before removing plug from socket outlet.
7. Take care to avoid running the appliance over the cord; it may damage the insulation.
8. The head has an exposed, revolving brush; keep long hair, loose clothing, fingers etc. from contacting the revolving brush. Switch off all power and remove plug from outlet before attending to Foam Roller or brush.

NOTE: - If the cord of this appliance becomes damaged or broken, the appliance must be returned to an authorised BISSELL Agent for cord replacement.

 
IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:









Blue: Neutral Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

1. The wire which is coloured Blue must be connected to terminal which is marked with the letter N or coloured Black.
2. The wire which is coloured Brown must be connected to terminal which is marked with the letter L or coloured Red.
3. Neither wire is to be connected to the earth pin of the 3 pin plug. If a 13 amp plug is fitted, fit a 3 amp fuse.

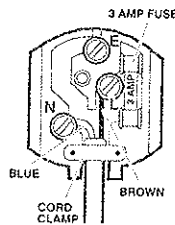

1. Assemble handle.
2. Vacuum carpet before shampooing. Test for colour fastness on small inconspicuous area. Furniture remaining on carpet should have feet protected with foil wrapping.
3. Fill tank with 1 part BISSELL Foam Carpet Shampoo to 10 parts tepid water, DO NOT USE HOT WATER. Tank capacity is 1.8 litres. Plug in appliance to suitable wall socket. See separate order form for Bissell Shampoo.
4. To commence shampooing press ON/OFF foot operated switch at rear of appliance housing and also release shampoo supply by using push button control on handle.
5. When foam appears move slowly and evenly over the carpet. Always work in the direction of the pile, slightly overlapping each area cleaned to avoid leaving any carpet untreated.
6. DO NOT OVERWET THE CARPET - Once a small amount of foam has been generated, release the push button on the handle and allow the power brush to massage the cleaning foam into the carpet pile. Then repeat the process on the next area of carpet. After shampooing, press foot operated switch again to stop appliance.
7. Leave carpet to dry completely. Ideally the carpet should be allowed to dry overnight. When dry, thoroughly vacuum.
8. Your appliance must be cleaned after use. Empty tank of all shampoo solution and half fill with clean water. Hold shampooer over sink, press trigger and thoroughly flush through. Wash brush and roller assembly with clean water. To avoid blocking shampoo distributor it is very important that appliance is completely emptied before storage.

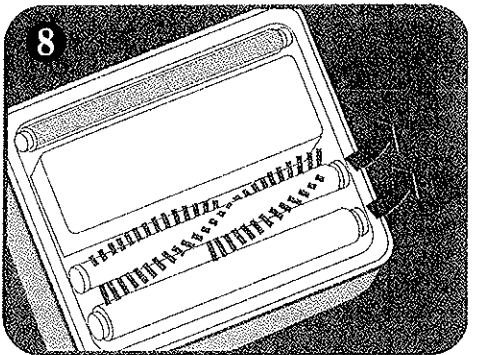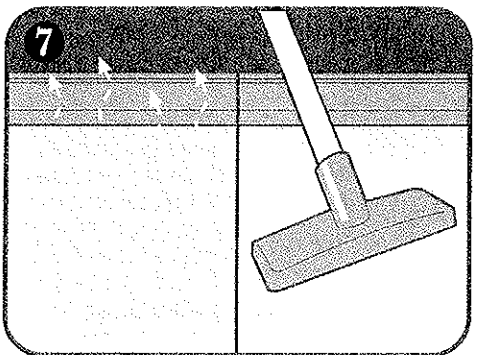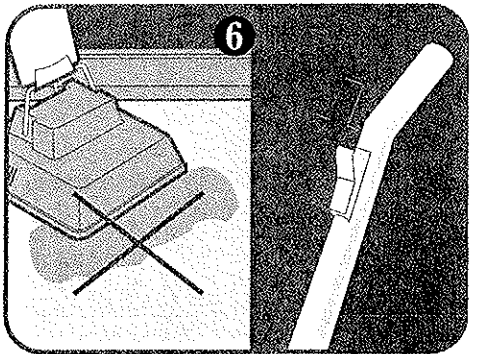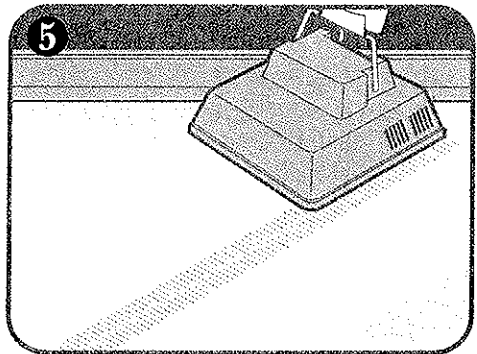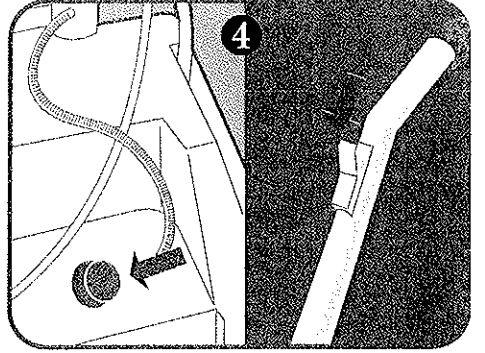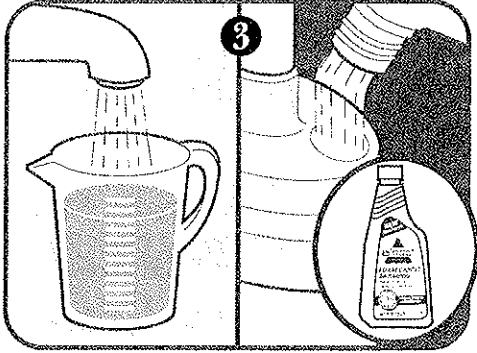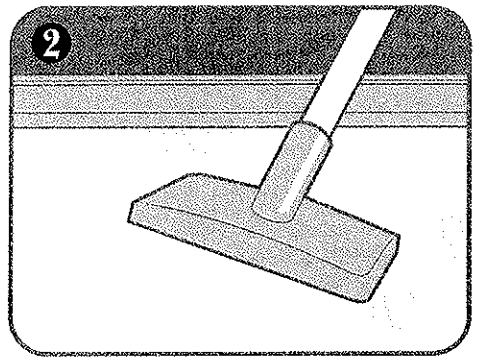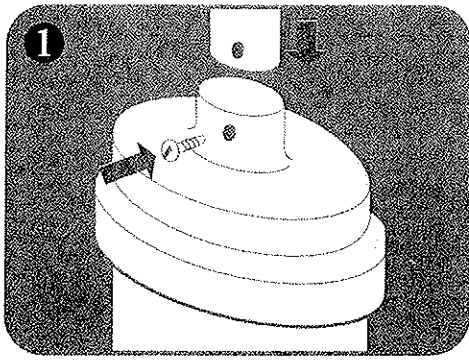        

TROUBLE SHOOTING DEPANNAGE FEHLERSUCHE STORINGZOEKEN LOCALIZATION DE DESPERFECTOS

PROBLEM PROBLEME PROBLEM PROBLEEM PROBLEMA	POSSIBLE CAUSES CAUSES POSSIBLES MÖGLICHE URSACHEN MOGELIJKE OORZAKEN POSIBLES CAUSAS	REMEDIES REMEDE ABHILFE REMEDIE SOLUCION
MOTOR NOT WORKING	Mains electrical supply not switched on	Plug in Spinfoamer and switch on
SHAMPOO NOT BEING RELEASED	Valve sticking	Remove handle and sharply push valve in top of tank housing several times.
	Distributor blocked	Carefully remove brush and roller assembly, distributor bar will now be visible. Clean distributor bar with small brush and clean warm water. If badly blocked it may be necessary to clear holes in distributor bar with a pin. Replace brush and roller assembly and flush through with clean warm water.
LE MOTEUR NE FONCTIONNE PAS	L'alimentation électrique secteur n'est pas mise en circuit	Brancher le dispositif Spinfoamer et mettre en circuit. Enlever le manche et enfoncer brusquement à plusieurs reprises la valve à la partie supérieure du réservoir.
LE SHAMPOOING NE SORT PAS	La valve colle	Enlever avec précaution l'assemblage brosse et cylindre; vous pourrez alors voir la tige du distributeur. Nettoyer cette tige avec une petite brosse et de l'eau tiède propre.
	Distributeur bloqué	Si le distributeur est complètement bouché, il sera peut-être nécessaire de déboucher les trous de la tige avec une épingle. Ensuite replacer l'assemblage brosse/cylindre et bien rincer à l'eau propre.
DER MOTOR FUNKTIONIERT NICHT KEIN SHAMPOO GESPENDET	Netzschalter ist nicht eingeschaltet Ventil klemmt Blockierter Verteiler	Spinfoamer in die Steckdose stecken und einschalten. Den Stiel abnehmen und das Ventil oben im Behältergehäuse mehrmals kräftig drücken. Die Bürsten- und Rollenbaugruppe vorsichtig ausbauen. Die Verteilerschiene ist nun sichtbar. Die Verteilerschiene mit einer kleinen Bürste und reinem, warmem Wasser reinigen. Bei schwerer Blockierung kann es erforderlich sein, die Löcher in der Verteilerschiene mit einer Nadel freizumachen. Die Bürsten und Rollenbaugruppe einbauen und mit reinem, warmem Wasser durchspülen.
MOTOR WERKT NIET SHAMPOO VLOEIT NIET NAAR BUITEN	Niet op het lichtnet aangesloten Afsluitert blijft hangen Verdeler verstopt	Spinfoamer (Spinschuimer) aansluiten en inschakelen. Steel verwijderen en afsluiter boven in tankhuis een paar maal indrukken. Borstels en rollen voorzichtig verwijderen. Verdelerpijp met borsteltje en schoon, warm water reinigen. Bij ernstige verstopping kan het nodig zijn de gaatjes in de verdelerpijp met een speid door te prikken. Borstels en rollen terugzetten en grondig doorspoelen met schoon warm water.
EL MOTOR NO FUNCIONA NO SALE EL CHAMPU	Suministro eléctrico de la red no conectado Válvula atascada Obstrucción del distribuidor	Enchufar el Spinfoamer y conectarlo. Quitar el mango y empujar firmemente varias veces la válvula que se encuentra en la parte superior del alojamiento del depósito. Con mucho cuidado, quitar la unidad de cepillo y rodillo. Ahora se puede ver la barra distribuidora. Con un cepillo pequeño, limpiar la barra distribuidora y lavarla con agua limpia y tibia. Si la obstrucción es considerable, tal vez resulte necesario limpiar con un afiler los orificios de la barra distribuidora. Volver a colocar la unidad de cepillo y rodillo y limpiarlos bajo agua corriente limpia y tibia.