


SpotBot®



2X
ULTRA



Our new 2X formulas are concentrated therefore less is needed than indicated on your tank. Please follow instructions to mark a new fill line.

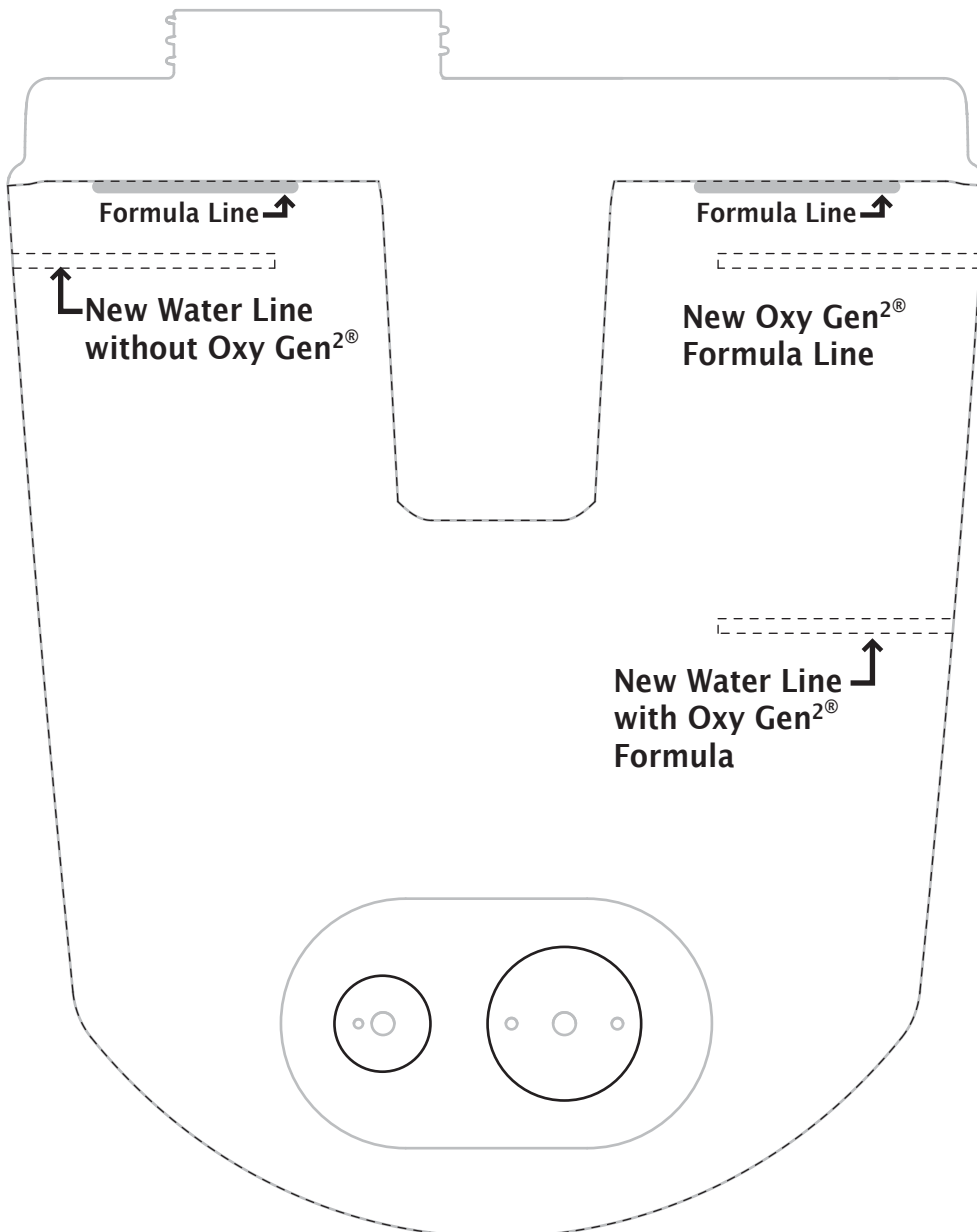

Instructions:

Option 1 (Liquid Measure) With Oxy Gen2:

1. Using a standard liquid measuring cup (or cap on BISSELL 2X deep cleaning formula), measure 10oz of **water** (5 caps full) and pour into tank. Using a permanent marker draw new "water" line on right side of tank.

2. Next, measure 15oz of **Oxy Gen2** (or 7 □ caps full) and pour into tank. Using a permanent marker, draw new "Oxy Gen2" line on right side of tank.

3. Add 4oz of **formula** (2 caps full) to fill tank to formula line.

Without Oxy Gen2:

1. Using a standard liquid measuring cup, measure 25oz of **water** (12 □ caps full) and pour into tank. Using a permanent marker draw new water line on left side of tank.

2. Add 4oz of **formula** (2 caps full) to fill tank to formula line.

Option 2 (Template):

1. Print out template at 100% on 8□ x 11 (letter size) paper.

2. Use scissors to cut on dotted lines.

3. Line up template with flat side of tank that contains current formula lines. The formula lines on the top of the template should line up with the formula lines on the tank.

4. Use a permanent marker to trace new formula lines and new water lines where template indicates.

to verify print accuracy

1 inch scale